


CORPORATE OFFICES
17340 MUNN RD.
CHAGRIN FALLS, OHIO 44023

TEL 866.868.0883
FAX 440.708.0165
wttus.com



TITLE 4' x 4' INSULATION ADHESIVE FIELD PATTERN			
SCALE NONE	DWN DMT	CHK NL	APPROVAL DATE 12/14/07
DRAWING NUMBER WTT-001			REV 0

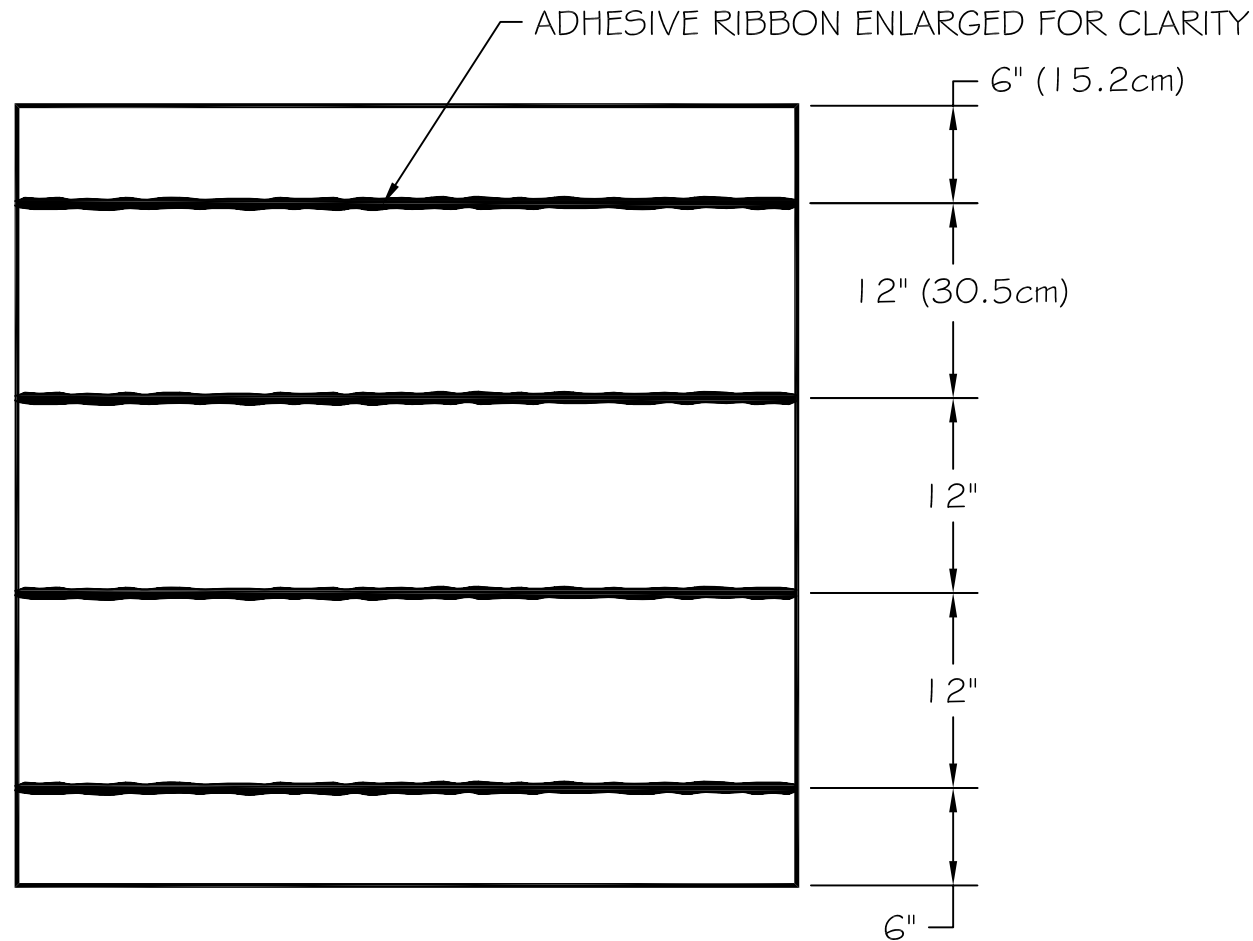

NOTES:

1. 4' x 4' INSULATION BOARDS
2. APPLY WEATHER-TITE ONE STEP FOAMABLE ADHESIVE DIRECTLY TO THE SUBSTRATE, USING A RIBBON PATTERN. EQUALLY SPACE THE 1/4"-1/2" (0.625cm-1.25cm) WIDE BEADS, TO ACHIEVE PROPER COVERAGE RATES FOR INSULATION ATTACHMENT. AFTER FOAMING EACH BEAD WILL EXPAND TO APPROXIMATELY 3/4"-1 1/2" (1.875cm-3.75cm).
3. AS ADHESIVE IS APPLIED, IMMEDIATELY PLACE INSULATION BOARD INTO WET ADHESIVE. DO NOT ALLOW THE ADHESIVE TO SKIN OVER. ELIMINATE UN-EVEN SURFACES TO ENSURE POSITIVE CONTACT BETWEEN THE INSULATION BOARD AND SUBSTRATE.
4. KEEP TEMPERATURE OF CONTENTS BETWEEN 65°F - 85°F (18°C - 29°C) 24 HOURS PRIOR TO USE. DO NOT STORE IN DIRECT SUNLIGHT OR HIGH TEMPERATURES 90°F (32°C) AND HIGHER.